Bb3.0 STANDARD

-

BO3.0 SIANDARD

■別のスタンダードとのペアリング
1. 電源 ON: LED が点灯するまで POWER を押し続けます
2.ペアリングモード: 両方のデバイスの INTERCALL を赤い LED がすばやく点滅するまで押し続けます。
3.ペアリングの開始: 他のデバイスのいずれかの INTERCALL をすばやく 1 回クリックすると、デバイスがお互いを検出します。
4.ペアリング成功: デバイスがペアリングされるとヘッドセットから「コネクティド(接続済み)」と聞こえます。

▲: 注意 ペアリングするとデバイスはペアリングを記憶します。ペアリングプロセスを 再度実行しないでください。 日常的に使用する場合はデバイスの電源を入れた後、いずれかのデバイスの INTERCALL ボタンをすばやくクリックすれば OK です。

■接続/切断

■ ISW / りかい いずれかのデバイスの INTERCALL ボタンをすばやく 1 回押すだけで、スタン ダードデバイスを簡単に接続または切断できます。

MUTE を 1 回クリックして、マイクの on/ off を切り替えます。

■携帯電話とのペアリング (スタンダードデバイスのみ.マスター は電話とペアリングできません.): Step 1: 携帯電話の Bluetooth 検索モードを有効にする。 Step 2: ユニットが OFF の状態で, LED の青と赤が点滅するまで POWER を押し

Step 3: 電話画面で "Bb30" を選択します。 Step 4: LED が青くゆっくり点滅しているのを確認したら、携帯電話とのペア リングは完了です。

■ハンズフリー *電話を取る/電話を切る: POWER を 1 回クリックします。 * 通話を拒否する/リダイアル: POWER をすばやく 2 回クリックします。

■音楽再生 * 再生 / 一時停止: POWER を 1 回クリック * 進む / 戻る: Vol+ を 2 秒押し続けると次の曲へ、Vol- を 2 秒押し続けると前の曲へいきます。

■リセット (デフォルトに戻す) OFF の状態で紫色の LED ライトが点滅するまで、POWER と Vol+ を同時に (3

▲注意: スタンダード またはマスター デバイスをペアリングまたは再ペアリングする 場合,ペアリングプロセスを実行する前に、最初にリセットする 必要があります。

■詳細■



インカム通話
 電源/ミュージック
 ミュート

① インカム通話 Ch1② 電源 / インカム通話 Ch2③ インカム通話 Ch3

弊社 Web サイトから更新ツールとファームウェアをインストールします。 タイプ C USB を PC に接続するか、携帯電話とペアリングして開始します。 詳細は : bbtalkin.com/update

ー インター 充電時間 --- 15 時間 ---- 2.5 時間 --- 2.5 ---- 65g ----- 1.6 km 通話範囲 防水 ------- IP68 が 防水ケースに入れる必要があります。

■ 充電 * AC アダプター 5V± 5% 500mA * 充電ケーブル: USB タイプ C 赤 = 充電中 青 = フル充電 * 電池の充電状態: 電源 ON 後の LED の色が 青 = 100% - 60% 紫 = 60% - 40%

bbtalkin intercom (ビービートーキン インターコム ′) = 100% - 60% battery mid (バッテリー ミッド) = 60% - 40% battery low (バッテリー ロー) = 40% - 0%

警告
* デバイスを改造または分解しないでください。
* 充電する前にデバイスが完全に乾いていることを確認してください。
* 使用できない場所:飛行機の中,ペースメーカーなどの医療機器や器具を装着して * このデバイスを極端な温度または湿度の場所にさらさないでください。

*デバイスが損傷した場合はすぐに使用を中止してください。

■2人以上で通信するにはマスターデバイスが必要です。

3 人同時通話: スタンダード + スタンダード + マスター 1. 電源 ON: マスター CH2 とスタンダードの POWER を LED が点灯するまで押し続けます。 2. ペアリングモード:

3.ヘアリンクの開始: マスター CHI をすばやく「回クリックすると、テハイスかお 互いを検出します。 ▲スタンダードデバイスの INTERCALL をクリックしないでください。 4.ペアリング成功: デバイスがペアリングされるとヘッドセットから「コネクティ ド(接続済み)」と聞こえます。 5.2 台目のスタンダードデバイスとのペアリング:同じプロセスに従いますが,マ スター CH3 にペアリングしています。 ▲注意・

マスター CH2 へのペアリングは別のプロセスであり、以下で説明します。

4 人同時通話:: スタンダード + スタンダード + スタンダード + マスター
1.3 台目のスタンダードデバイスとのペアリング: OFF の状態で, LED が赤くすばやく点滅するまでマスター CH2 を 5 秒間、押し続けます。
3 台目のスタンダードデバイス: 赤い LED がすばやく点滅するまで INTERCALL を押し続けます。
2.ペアリング開始: マスター CH2 をすばやく 1 回クリックすると、デバイスがお互いを検出します。
▲スタンダードデバイスの INTERCALL をクリックしないでください。
3.ペアリング成功: デバイスがペアリングされるとヘッドセットから「コネクティド(接続済み)」と聞こえます。

▲注意: デバイスがペアリングされると、お互いが記憶されます。ペアリングプロセスを再度実行しないでください。 スタンダードデバイスはペアリングされている CH に従って番号をつけることを強

■接続 / 切断 日常的に使用する場合は、デバイスの電源を入れたら接続したいスタンダードデバイスのマスター CH ボタンをすばやく 1 回押して接続します。 (スタンダードデバイスは INTERCALL を押して接続を制御することもできます。)

▲注意:
CH1,2,3 を同時に押さないでください。CH1 が接続された後, CH2 または CH3 を呼び出すことができます。

■ミュート Vol+ と Vol- ボタンを 1 回押して on/ off を切り替えます。

■リセット (デフォルトに戻す) OFF の状態で、紫色の LED ライトが点滅するまで CH2 ボタンと Vol+ボタンを同時 に 3 秒間、押し続けます。

▲注意:
*マスターは携帯電話とペアリングできません(アップデートモードを除く)
*マスターは別のマスターとペアリングできません。
*マスターおよびスタンダードデバイスはアドバンスユニットとペアリングできま

保証規定
本製品の購入日から本体は12か月間、本製における製造上の欠陥を保証しております。
弊社の保証義務は以下に記載の条件が制限されています。
弊社の保証義務は以下に記載の条件が制限されています。
弊社の保証義務は以下に記載の条件が制限されています。
弊社の保証義務は以下に記載の条件が制限されています。
第一次の主意の記しが、名響、電力サージ、その他の自然現象、
た、本製品の取り付けまたは取り外しに起因する損傷、劣化、誤動作、改造、不適切な使用、誤用、乱用、事故、過度の認気、火災、不適切な梱包と配送、名響、電力サージ、その他の自然現象、
また、本製品の取り付けまたは取り外しに起因する損傷、劣化、誤動作、改さん、修理を行う権限のない者が試みた修理、この製品の材料または製造上の欠陥に直接関係しないその他の原因によるものに保証は適用されません。
またこの製品が BDTALKIN または購入元の認定販売店、または認定されたその他の当事者に返品、修理をする場合、恐れ入りますが発送時の保険料と配送料はお客様によって先にお支払いいただきます。
保険なしてご返送された場合の輸送中の粉失または損傷のすべてのリスクはお客模が負もためたします。
BDTALKIN はこの製品をインストールから削除または再インストールすることに関連する費用についてまました場合しいの粉ままたは損傷のすべてのリスクはお客模が負もたのとします。
と時間または大音量で使用されますと耳を傷める場合があり、また
サイに大き量で使用されますと耳を傷める場合があり、また
アイー性のUSB ワイヤーヘッドホンやイヤホンなどを使用すると、デバイスが損傷する可能性がありますがいずれについても弊社は責任を負いません。
この製品の最初の購入者のみがこの保証の対象となります。
この製品の最初の職者ものみがの保証の対象となります。
この製品の最初の最ものみの後の購入者または所有者に譲渡できません。
この製品が定りするには、この製品を購入していたいといまが出れていては当社のWeb サイト www.bbtalkin.com
にアクセスするかまたは最寄りのBDTALKIN 認定再販業者の開入を証明する目付つきのレシートが必要でない。
この製品が発証と基づくには、財団和以下・インでは、
といいないとは、
といいないの場合に表し、このもは、
といいないないといました。
といれては、まないは、
といいないないないました。
といれては、まないは、
といれては、
といれては、まないは、
といれては、まないは、
といれては、まないは、
といれては、まないは、
といれては、まないは、
といれては、まないは、
といれては、
といれては、まないは、
といれては、
と

Bb TALKIN'

Action sports intercom Bluetooth

STANDARD 3.0 / MASTER 3.0

USERS GUIDE

この東は BbTALKIN' Bluetooth 通信システムをご購入いただき ありがとうございます。まずこのマニュアルをよくお読みいただき 機能をご理解の上ご使用ください。

www.bbtalkin.com

Bb3.0 STANDARD

■Pairing with another Standard:

1. Power on: Press and hold the POWER until LED on

2. Pairing mode: Press and hold both devices' INTERCALL until red LED is

Begin pairing: Click either one of device's INTERCALL once quickly, the devices are finding each other
 Pairing successful: When the devices are paired, you will hear "connected"

on your headset

▲NOTICE:

Once paired, your devices will memorize the pairing. Do not go through the pairing process again.

For every day use, quickly click either one of the device's INTERCALL buttons after you have powered your device on.

■Connect/Disconnect

You can easily connect or disconnect your Standard devices by quickly pressing either device's INTERCALL button once.

Click the MUTE once to turn on/off the microphone.

■ Pairing with your mobile phone (STANDARD device only. MASTER cannot pair to phone.): Step 1: Enable mobile phone's Bluetooth search mode Step 2: While the unit is OFF, press and hold the POWER until LED blue & red

Step 3: Select "Bb30" on the phone screen
Step 4: Once you see the LED slowly flashing blue, pairing to your phone is

■Hands free

Pick up / Hang up the phone call: Click POWER once
 Decline a call / Redial: Click POWER twice quickly


Play / Pause music: Click POWER once

Forward / Backward: Press and hold 2sec. Vol+ for forward and Vol- for

■Reset (back to default)
While OFF, press and hold (3sec) the POWER and Vol+ AT THE SAME TIME until the purple LED light flashes

▲ NOTICE:

When pairing or re-pairing any STANDARD or MASTER devices, they must first be reset before going through the pairing process.

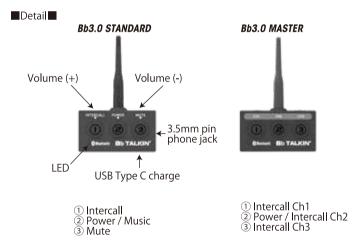

1.Install update tool and Firmware from our website.
2.Plug USB Type C in PC or pair with mobile phone to start.
3.For more detail: bbtalkin.com/update

■ Specs Intercall talk time Charge time -- 65g - 1.5 km Weiaht --Range Water-proof -- IP68 *must in the waterproof case

Tone Sound: bbtalkin intercom = 100% - 60% battery mid = 60% - 40% battery low = 40% - 0%

● AC adaptor 5V± 5% 500mA ● Charging cable: USB Type C Red = Charging Blue = Full charged How to know battery status:

LED: The second indicator after power ON Blue = 100% - 60%

Purple = 60% - 40% Red = 40% - 0%

WARNING

DO NOT modify or disassemble the device.

Make sure the device is completely dry before charging.

The area you cannot use: in the airplane, near the person with medical devices or equipment such as pacemaker, etc.

DO NOT expose this device to extreme temperature or humidity place.
 When the device gets damage, stop using it immediately.

Bb3.0 MASTER

■You need a MASTER device to communication with more than two people. 3-WAY COMMUNICATION: STANDARD + STANDARD + MASTER 1. Power on: Press and hold the MASTER CH2 and STANDARD POWER until LED

on
2. Pairing mode:
MASTER: Press and hold CH1 until red LED is quickly flashing
STANDARD: Press and hold INTERCALL until red LED is quickly flashing
3. Begin pairing: Click the MASTER CH1 once quickly, the devices are finding

each other

▲Do not click STANDARD INTERCALL

4. Pairing successful: When the devices are paired, you will hear "connected" on your headset

5. Pairing with 2nd STANDARD DEVICE: Follow the same process; however, you are pairing to the MASTER CH3

▲NOTICE:

Pairing to MASTER CH2 is a different process and described below.

4-WAY COMMUNICATION: STANDARD + STANDARD + STANDARD + MASTER
1. Pairing with 3RD STANDARD DEVICE: While OFF, press and hold (5sec.)
MASTER CH2 until LED is quickly flashing red
3RD STANDARD DEVICE: Press and hold INTERCALL until red LED is quickly

2. Begin pairing: Click the MASTER CH2 once quickly, the devices are finding

▲ Do not click STANDARD INTERCALL
3. Pairing successful: When the devices are paired, you will hear "connected" on your headset

Once your devices are paired, they remember each other. Do not go through the pairing process again. It is highly recommended that the STANDARD devices be numbered according to the CH they are paired to.

■Connect/Disconnect
For every day use, once the devices are turned on, to connect, quickly press
the MASTER CH button once for the STANDARD devices you wish to connect.
(The STANDARD devices can also control connecting by pressing INTERCALL)

ANOTICE:

Do not press CH1,2,3 AT THE SAME TIME. After CH1 is connected, then you can call out CH2 or CH3.

Press the Vol+ and Vol- button once to turn on/ off the microphone.

■Reset (back to default)
While OFF, press and hold (3sec) the CH2 button and Vol+ button AT THE
SAME TIME until the purple LED light flashes

▲NOTICE:

*MASTER cannot pair with mobile phone (Except the update mode)

*Master cannot pair with another Master

*MASTER and STANDARD devices cannot pair to ADVANCE units

LIMITED WARRANTY
This limited warranty covers defects in materials and workmanship in this product for twelve month (12) months for main device

This limited warranty covers defects in materials and workmanship in this product for twelve month (12) months for main device only.

This limited warranty obligations of BbTALKIN for this product are limited to the terms set forth below. This limited warranty does not cover any damage, rusty USB part, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping, lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product many installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by BbTALKIN to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment endosures, cables or accessories used in conjunction with this product. This limited warranty does not cover cartons, equipment endosures, cables or accessories used in conjunction with this product. This limited warranty does not cover cartons, equipment endosures, cables or accessories used in conjunction with this product. It is limited warranty does not cover cartons, equipment endosures, cables or accessories used in conjunction with this product. It is limited warranty does not cover cartons, equipment endosures, cables or accessories used in conjunction with this product. It is limited warranty does not cover cartons, equipment endosures, cables or accessories used in conjunction with this product. It is limited warranty with the insurance and shipping changes prepaid by you. It finis products, this product is returned uninsured, you assume all risks of loss or damage during shipment, with the insurance and shipping changes prepaid by you. It finis product is returned uninsured and shipping changes prep

refused. Limitation on Liability THE MAXIMUM LIABILITY OF BISTALKIN UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, BISTALKIN IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, specia incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Bb TALKIN'

Action sports intercom **Bluetooth**

STANDARD 3.0 / MASTER 3.0



Thank you for choosing the BbTALKIN' Bluetooth communication system. This instruction manaul will help you operate this system. First, read this manual carefully and familiarize yourself with functionalities before use.

www.bbtalkin.com



□ 本 社 東京都品川区南品川 2-7-18 TEL 03-5715-2351□ 関 西 支 店 大阪市西区千代崎 1-24-11 TEL 06-6583-7700

 □ 札幌営業所
 □ 名古屋営業所

 □ 仙台営業所
 □ 九州営業所